## AVR128: Setup and Use the Analog Comparator

## Introduction

This application note serves as an example on how to set up and use the AVR's Onchip Analog Comparator. The following program examples are given in the assembly file "avr200.asm":


- Detect a positive edge on the comparator output by polling the ACO-bit in the Analog Comparator Control and Status Register ACSR.
- Detect a positive edge on the comparator output by polling the Analog Comparator Interrupt Flag ACI in ACSR.
- Initialize interrupt on comparator output toggle. An interrupt routine which increments a 16-bit counter each time it is executed is given as an example.

## Detecting a Positive Edge by Polling ACO

This part of the code shows the trivial way of detecting a positive edge on the comparator output. Even though it uses only four words of code and no initial setup, this approach to the task might cause problems. If a short pulse on the output occurs while the program is administrating the wait loop, the pulse could be missed as ACO is directly connected to the comparator output. If the user wants to insert code within the wait loop, the probability of detecting a short pulse will increase. Such code might be time-out if no edge occurs within a specific period. The procedure for detection is as follows:

- 1. If output is high, wait for output to go low.
- 2. Wait until output goes high.

Figure 1. ACO Polling Flow Chart

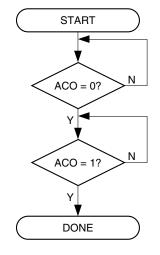





# Application Note

Rev. 0934B-AVR-05/02





Parameter	Value	
Code Size (Words)	4	
Response Time (Cycles)	3 - 5	
Initialization Time (Cycles)	0	
Register Usage	<ul><li>Low Registers</li><li>High Registers</li><li>Pointers</li></ul>	:None :None :None
Interrupts Usage	None	
Peripherals Usage	Analog Comparator	

 Table 1. ACO Polling Performance Figures

### Detecting a Positive Edge by Polling ACI

This part of the code shows a far more secure and flexible way of detecting a positive edge on the comparator output. Even though the Analog Comparator Interrupt is disabled, the interrupt flag will still be set when events on the comparator output matches the settings of the ACIS1/ACIS0 bits in ACSR. E.g., a positive edge will always set the ACI bit in ACSR if ACIS1/ACIS0 both are one (refer to the databook for details). The ACI flag will reflect whether the event to look for has occurred since the last ACI Reset. In this application note, positive edge detection by polling ACI is implemented according to the following procedure:


Setup

1. Set ACIS0 and ACIS1 = 1.

Polling

- 1. Clear the ACI bit by writing an logical "1" to it.
- 2. Wait until ACI goes high.

Figure 2. ACI Polling Flow Chart

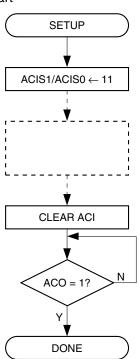

2

Parameter	Value	
Code Size (Words)	5	
Initialization Time (Cycles)	2	
Response Time (Cycles)	3 - 5	
Register Usage	<ul><li>Low Registers</li><li>High Registers</li><li>Pointers</li></ul>	:None :None :None
Interrupts Usage	None	
Peripherals Usage	Analog Comparator	

Table 2.	ACI Polling	Performance Figures	
----------	-------------	---------------------	--

## Using the Analog Comparator Interrupt

The application note program shows an example on how to enable the comparator interrupt. In the example, interrupt on comparator toggle is shown. The following procedure is followed:

- 1. Clear interrupt flag and ACIS1/ACIS0. The interrupt flag must be cleared first. If not, and the flag for some reason already is set, the MCU will start executing the interrupt routine immediately when the interrupts is enabled. Clearing ACIS1/ACIS0 selects interrupt on toggle.
- 2. Enable Global Interrupts.
- 3. Enable the Analog Comparator Interrupt by setting the ACIE bit in ACSR.

Note that since the ACSR Register is one of the lower 32 I/O, registers, the "SBI" instruction can be used to set, clear and test bits.

Parameter	Value	
Code Size (Words)	4	
Execution time (Cycles)	5	
Register Usage	<ul><li>Low Registers</li><li>High Registers</li><li>Pointers</li></ul>	:None :1 :None
Interrupts Usage	None	
Peripherals Usage	Analog Comparator	

Table 3. Analog Comparator Interrupt Enable Performance Figures





#### **Atmel Headquarters**

*Corporate Headquarters* 2325 Orchard Parkway San Jose, CA 95131 TEL 1(408) 441-0311 FAX 1(408) 487-2600

#### Europe

Atmel Sarl Route des Arsenaux 41 Case Postale 80 CH-1705 Fribourg Switzerland TEL (41) 26-426-5555 FAX (41) 26-426-5500

#### Asia

Room 1219 Chinachem Golden Plaza 77 Mody Road Tsimhatsui East Kowloon Hong Kong TEL (852) 2721-9778 FAX (852) 2722-1369

#### Japan

9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan TEL (81) 3-3523-3551 FAX (81) 3-3523-7581

#### **Atmel Operations**

Memory

2325 Orchard Parkway San Jose, CA 95131 TEL 1(408) 441-0311 FAX 1(408) 436-4314

## Microcontrollers

2325 Orchard Parkway San Jose, CA 95131 TEL 1(408) 441-0311 FAX 1(408) 436-4314

La Chantrerie BP 70602 44306 Nantes Cedex 3, France TEL (33) 2-40-18-18-18 FAX (33) 2-40-18-19-60

#### ASIC/ASSP/Smart Cards

Zone Industrielle 13106 Rousset Cedex, France TEL (33) 4-42-53-60-00 FAX (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906 TEL 1(719) 576-3300 FAX 1(719) 540-1759

Scottish Enterprise Technology Park Maxwell Building East Kilbride G75 0QR, Scotland TEL (44) 1355-803-000 FAX (44) 1355-242-743 **RF**/Automotive

Theresienstrasse 2 Postfach 3535 74025 Heilbronn, Germany TEL (49) 71-31-67-0 FAX (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906 TEL 1(719) 576-3300 FAX 1(719) 540-1759

Biometrics/Imaging/Hi-Rel MPU/ High Speed Converters/RF Datacom Avenue de Rochepleine BP 123 38521 Saint-Egreve Cedex, France TEL (33) 4-76-58-30-00 FAX (33) 4-76-58-34-80

e-mail

literature@atmel.com

Web Site http://www.atmel.com

#### © Atmel Corporation 2002.

Atmel Corporation makes no warranty for the use of its products, other than those expressly contained in the Company's standard warranty which is detailed in Atmel's Terms and Conditions located on the Company's web site. The Company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of Atmel are granted by the Company in connection with the sale of Atmel products, expressly or by implication. Atmel's products are not authorized for use as critical components in life support devices or systems.

 $\mathsf{ATMEL}^{\texttt{®}}$  and  $\mathsf{AVR}^{\texttt{®}}$  are the registered trademarks of Atmel.

Other terms and product names may be the trademarks of others.

